
Clavinet D6 Disassembly Guide

Step One

Start By removing the two thumbscrews located on the lower front panel.

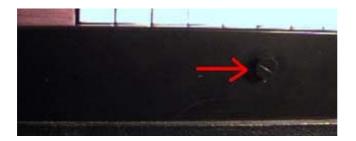






Remove the front panel by pulling down on its top ledge, it is partially seated in a notch on the left wood panel and it sits below the right wood panel.

Clavinet D6 Disassembly Guide Page Two



Step Two

On the right wood panel, remove the thumbscrew located in the upper right hand corner.

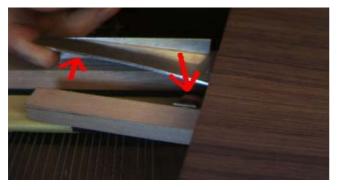

Pull up the enlongated piece of metal and pull the wood panel straight out towards you. You will notice a small red wheel attached to the panel that rolls underneath the metal. This is the damper mechanism.



Remove the panel from the keyboard.

Clavinet D6 Disassembly Guide Page Three




Step Three

Remove the thumbscrew located are the top of the left wood panel containing the binary switches and volume control.




Since the left wood panel is electrically attached to the keyboard, simply set it behind the wood block standing up.

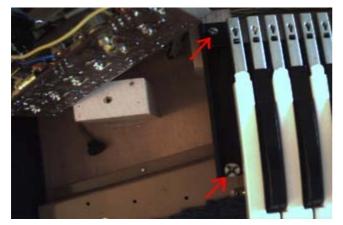

Step Four

Locate the two screws on the left side of the keyboard assembly, the lower screw has a "castle-nut" shape. Remove both with a standard screwdriver.

Clavinet D6 Disassembly Guide Page Four

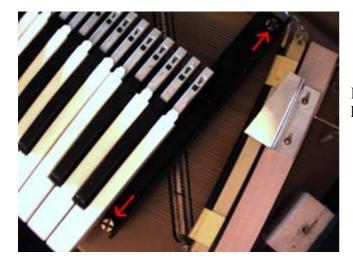

Locate the two screws on the right side of the keyboard assembly and remove.



In the center of the keyboard at the top, is a small brace located beneath the keys. Remove the screw in the center (its removed in the photo).



Step Four

Grasp the keyboard assembly by the metal bars and lift it off the 4 studs.

Clavinet D6 Disassembly Guide



You can lift it off with two hands, I just lifted each side for photo purposes.



Congratulations! You now have direct access to the strings and the keyboard assembly.